

Quick Start Guide



- Box Should Include:**
1. Power Supply
 2. Black Cable (RJ-45)–(directly connected to PC)
 3. White Cable (RJ-45)–(connected through a network)
 4. Wrench with mounting manual
 5. CD/ Warranty card/ Installation print out
 6. Rubber Packing

Step 1: Insert power supply into the unit and wait until the Hectrix logo is displayed.
 Step 2: Attach **black RJ-45** cable to the unit if connected directly to PC. If connecting to a Network use the **white RJ-45 cable**.
 Step 3: Press the Menu button and use A999 as the Admin ID and press enter. Use 1 as the Password followed by the enter key. This will take you to the main menu.
 Step 4:

<i>MENU</i>	<i>ACTATEK SETTINGS</i>	<i>PC/LAPTOP SETTINGS</i>	<i>PC/LAPTOP SETTINGS</i>
IP ADDRESS	192.168.1.100	192.168.1.50	192.168.1.50
GATEWAY	192.168.1.254	192.168.1.254	
SUBNET MASK	255.255.255.0	255.255.255.0	255.255.255.0
DHCP	OFF	ON	OFF
DNS	192.168.1.254	192.168.1.254	
CONNECTION	TO COMPUTER	WHITE CABLE	BLACK CABLE

Step 5: Open a web browser in your PC and type in the IP address of ACTAtek, in this case is 192.168.1.100 and you will retrieve the login page.